

2. Occupational safety, Security First-aid/Eye wash bottles

Eye-Wash Bottle, Barikos

Barikos KS

Barikos KS and Mini Barikos KS are maintenance-free models of eye wash bottles. Containing water, they can be kept ready for use for at least two years in the sealed state. Both models are ideal for including within first aid boxes and sets. All above mentioned Barikos eyewash bottles comply with EN 15154-4. A protective cover clips onto the spray head of the eye wash bottle thus preventing any leakage. The tamper-evident seal guarantees proper function.

Barikos K

Barikos and Barikos K are designed to be filled with clear water. If the user is likely to be operating an eyewash bottle when standing, we recommend the Barikos. The user need only incline his head slightly downwards, ensuring good contact with the spray head of the bottle. The Barikos K eyewash bottle (vol.620 ml) can be used immediately, even when the injured person is lying down. As soon as the bottle is tilted downwards, a patented sliding valve opens and the washing fluid reaches the spray head unhindered. The Mini Barikos eyewash bottle (vol.175ml) is designed for persons who are frequently present in different working areas.

All bottles with sliding valve are suitable for use with upright and with the downward spray head.

Description	PK Cat. No.
Barikos KS, 620ml, filled	1 9.005 009 1
Mini Barikos KS, 175ml, filled	1 9.005 008 2
Barikos, 620ml, empty	1 9.005 011
Mini Barikos, 175ml, empty	1 9.005 020
Barikos K, 620ml, empty	1 9.005 014
Barikos K / KS wall unit for 1 eye wash bottle, plastic coated steel wire	1 9.005 015 3
Barikos K / KS wall unit for 2 eye wash bottles, platic with transparent lid	1 9.005 017 4
Barikos K / KS wall unit for 1 eye wash bottle, platic with transparent lid	1 6.076 057 <mark>5</mark>



Eye Wash oculav Nit®

oculav NIT[®] Eye Wash

First aid eye wash sterile solution. 250 ml of sterile solution for eye wash treatment at the accident scene. Especially effective against eye injuries stemming from acid and caustic burns as well as pepper, CS and tear gases.

- Easy to dispense, providing gentle removal of foreign bodies
- Temperature-resistant, no contamination, maintenance-free
- One handed use
- According to MPG (German Act on Medical Devices) DIN EN 15154-4.
- can be stored for at least 3 years
- oculav NIT®-Box

Orange plastic box, size 260 mm x 160 mm x 80 mm, with printed inscriptions and practical wall brackets. With 4 ready to use bottles oculav NIT[®] Eye Wash. The first-aid set for eye injuries contains DuOcul eye compresses, eye flaps, plaster strips, compress and disposable gloves.





Description	PK	Cat. No.
oculav NIT [®] Eye Wash, 250 ml bottle	1	9.005 001
oculav NIT®-Box with 4 x 250 ml bottles	1	9.005 002

237

www.haeberle-lab.de

E & OE.

Phone: +49 7336 9603-0

NEW


B-SAFETY

GENERAL CATALOGUE EDITION 20



2. Occupational safety, Security

First-aid/Eye wash bottles

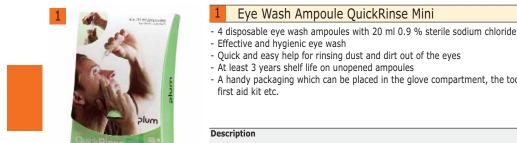

- Quick and easy help for rinsing dust and dirt out of the eyes	
- At least 3 years shelf life on unopened ampoules	
- A handy packaging which can be placed in the glove compartment, the tool box, in the bag, in a pocket,	
first aid kit etc.	

Description	PK	Cat. No.
QuickRinse mini, Eye wash ampoules, 4 x 20ml sterile 0.9 % NaCl	4	6.270 978





6.240 397

9.733 79

Eve Wash Bottle, 0.9 % NaCl, St								
	orila	Cto		0/	A A	Dottlo	Mach	Evro
	erne	216	NALL	<i>⊻</i> /∩	11 9	БОШЕ	vvasn	EVe

- choice of 0.2 litre (washing time approx. 2 minutes) or 0.5 litre (washing time approx. **B-SAFETY** 5 minutes) bottles
- Duo wash bottle for both eyes 1000 ml (washing time approx. 5 minutes)
- ergonomic eye cup keeps the eyes open during application
- saline solution (0.9 %), conforming to the natural salinity of the eye
- according to DIN EN 15154-4
- CE-marked
- shelf life: 3 years Applications:
- mobile application
 - transportation of dangerous goods acc. GGVS
- emergency medication
- First-aid boxes
- refill unit for eye wash emergency station
- NEW: eye wash bottle DUO for simultaneous washing of both eyes

4

Description	PK Cat. No.
Eye wash bottle 0,9 % NaCl, 200 ml	1 9.733 794 2
Spare eyewash bottle, 0,9 % NaCl, 500 ml	1 9.733 793
Eye wash bottle DUO 0,9 % NaCl, 1000 ml	1 6.240 397 3





Eye Wash Bottle pH-Neutral

A small, handy bottle containing 4.9 % sterile phosphate buffer solution, that neutralises the eye's fluid after accidents involving acids and alkalies.

- shelf life: 3 years
 - rinsing time: about 2 minutes
 - according to DIN EN 15154-4
 - Applications:
 - mobile application
 - emergency medication
 - First-aid boxes
 - refill unit for eye wash emergency station
 - NEW: eye wash bottle DUO for simultaneous washing of both eyes.

Description	PK Cat. No.
Eye wash bottle, pH neutral, 200 ml, single	1 9.733 788 4
Eye wash bottle pH neutral DUO, 500 ml	1 9.733 817 5

Eye Wash Emergency Station DUO 6

For parallel treatment of both eyes. With one pH neutral DUO eye wash bottle with 500 ml sterile phosphate buffer solution (4.9 %) and one DUO eye wash bottle with **B-SAFETY**

1000 ml sterile sodium chloride solution (0.9 %). With wall mounting, enclosed piktogram and mirror. Instructions included. Especially suitable for workplaces where chemicals and contaminents can penetrate the eye. Advice: Also after treatment with pH neutral solution continued flushing until medical treatment with sodium chloride solution is recommeded. Shelf life: 3 years. According to DIN EN 15154-4:2009.

Description	РК	Cat. No.
Eye wash emergency station DUO	1	9.733 816
Eye wash bottle DUO, pH neutral , 500 ml	1	9.733 817
Eye wash bottle sodium chloride solution DUO, 1000 ml	1	6.240 397

238 info@haeberle-lab.de

nulc





9.733 788



9,733,817



3

Durability:

2. Occupational safety, Security

First-aid/Eye wash bottles-Eye wash stations

6.240 397


B-SAFET

PK Cat. No. 1 9.733 778

1

1 9.733 779 5

9.733 786 6

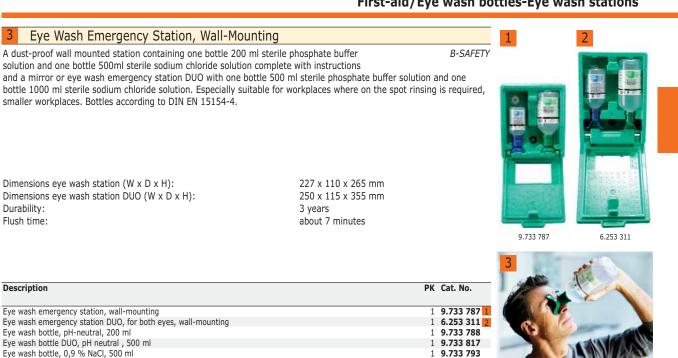

4 Mini Eyewash Station EyesFresh

Eye-wash bottle DUO, 0,9 % NaCl, 1000 ml

Ideal for the lab, filling stations or all work places where aggressive substances are used. Bürkle "Eyes Fresh" can be attached to any standard cold water tap. For normal use of the tap, just press the button and the function changes back from the eye wash (returns automatically to eyewash-function when the tap is closed). Can be fitted onto taps with M22x1, 1/2" or 3/8" outer thread.

Description	РК	Cat. No.
Mini eyewash station EyesFresh	1	6.076 887



Hand-Held Drench Hoses

Two sprays in one. The hose can be used as a fixed eyewash when fitted into the mount. This allows the injured person to use both hands to hold open the eyes. The hose can

also be removed from the mount so that other body parts and reclining patients can be treated. - For wall and table mounting

- Wall-/ table mount included
- according to DIN 1988 und DIN EN 1717
- according to DIN EN 15154-2:2006 and ANSI Z358.1-2004
- DIN-DVGW tested and certificated
- DIN certification label included
- The spray heads ensure a wide distribution of water so that areas around the eyes are also covered and the exact positioning of the eyes is therefore not critical
- Large holes in the spray heads protect against limescale. The spray heads can be removed for cleaning purposes
- Rubber shrouds on the nozzles help prevent accidental injury
- Self-closing valve with squeeze lever operation
- Lightweight dust caps fall off automatically on operation
- Integral jet regulator keeps the water jet constant independent of the water pressure
- Built-in non-return valve prevents any backflow of contaminated water

Spray height:	250 mm	
Hose length:	1500 mm	
Connection:	1/2" swivel nut	
Water output:	7 litres/min per spray head, regulated	
Inlet fitting:	M 28 x 80 mm	
Description	Connection	
1 spray head, 45° angle	1/2" female	
2 spray heads, 45° angle	1/2" female	

1/2" female



info@haeberle-lab.de

1 spray head, vertical

www.haeberle-lab.de

F & OF

Phone: +49 7336 9603-0

239

B-SAFETY

B-SAFETY

B-SAFETY

Cat. No.

7.656 739

PK

1

GENERAL CATALOGUE EDITION 20

2. Occupational safety, Security

First-aid/Eye wash stations-Body showers

1 Safety Eye Showers

R

- With two high performance spray heads
- Dust caps, which open automatically on operation, protect against dirt inside the spray heads
- Rubber sleeves protect the person seeking help against further injuries
- Table and wall mounting bracket
- Stainless steel covered hose 1500 mm
- Flow rate: 7 liter/minute/spray head
- Integrated flow regulation which guarantees uniform jet of water independent from water pressure
- According to ANSI Z358.1-2004 and DIN EN 15154-2:2006
- DIN-DVGW tested and certified

Description	Connection	Attachment	PK Cat. No.
with two spray heads 45°	1/2" female	Table mounted	1 6.254 947 <mark>2</mark>
with two spray heads 45°	1/2" female	Wall mounted	1 9.733 819 <mark>3</mark>
stainless steel bowl	¾" female	Wall mounted, exposed pipework	1 7.653 251 <mark>4</mark>





Body Showers/Emergency Showers

- Special showering heads ensure that large water quantities in gentle streams reaches
- the injured person without damaged the injured skin.
- The showers meet EN 15154-1:2006
- DIN-DVGW tested and certified
- Marked sign according to DIN is included
- Large dimensioned maintenance-free ball tap for large throughput quantities
- Throughput quantity: approx. 60 litres/min.
- Simple assembly
- Stable structure
- Chemical-resistant PE powder painting
- High speed showering heads made from plastic, with improved spray battern. Corrosion resistant, calcify- and
- maintenance free, very durable, even emptying. - Large, easy-to-use release bar
- Comes with all mounting materials
- Connection 3/4"

6

Inlet	Length	Attachment	PK Cat. No.
	mm		
Surface mount	625	Wall flange	1 9.733 810 5
Concealed mount	625	Wall/60 mm - ¾" pipe	1 9.733 811
Surface mount	565	Over door wall flange	1 9.733 812



Safety Shower Test Cart, Tank Capacity 30 litres, Mobile

With the safety shower test cart you can keep the monthly required functional test simple and easy. - mobile collecting tray equipped with 4 roles made of black plastics

- two integrated grip recesses
- one drain screw
- funnel made of black plastics, diameter 440 mm, height 160 mm
- total height 2100 mm
- pipe material aluminium 47 mm, pluggable
- tank capacity 30 litre
- total weight 7 kg
- detachable in 3 parts for simple storage

Description

Safety shower test cart

GHS warning labels - please see page 236

www.haeberle-lab.de

E & OE

2. Occupational safety, Security First-aid/Dressings/plasters

1 Extraset Plasters Refill	1
The most commonly occuring injuries are to the fingers and hands. The proportion of plasters in the average industrial	L Latter Latter
first aid box is only limited. The Extraset plasters refill was created for precisely this reason and contains 116 plasters in high-grade, non-allergenic material in several formats and sizes.	1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1 1
Type PK Cat. No.	
Extraset plasters refill 1 9.264 165	
Plaster Dispenser aluderm®-aluplast	2
- Manufactured from highly tensile ABS - Size 160 x 122 x 57 mm	
 With wall mounting Filled with five varieties of aluminium vaporised aluderm®-aluplast plasters. Sizes: 30 Strips 72 x 25 mm, 30 Strips 	
72 x 19 mm, 25 fingertip plasters, 20 finger dressings 120 x 20 mm and 10 finger joint plasters. Each plaster variety is stored independently in its own compartment and gives a clear product overview for the user.	
Each plaster variety is stored independently in its own compartment and gives a clear product overview for the user.	i a a maji in the game
	aluderm'-aluplast Pflasterspender
	9.264 146
	3
	and another
Description PK Cat. No.	M
Plaster Dispenser aluderm®-aluplast, 1 9.264 146 2	
filled with 115 plasters Refill pack, complete for aluderm®-aluplast, 1 9.264 147 3	10.10
with 115 plasters	
	9.264 147
Plaster Dispenser QuickFix	4
Pull and you immediately have a plaster ready for use. Each plaster is individually B-SAFETY	QuickFix
packed. This provides great hygienic safety. Ready for use at critical workplaces. The plasters are made of protective, PE material that allows the skin to breathe and are especially suitable for damp	
workplaces. The QuickFix dispenser is only 23 cm wide and 13.5 cm high. It contains 90 plasters in spite of its modest size so it can be installed precisely in those places where the need is greatest. Refilling of the dispenser is also possible	- Num
with other types of the QuickFix range.	
QuickFix Elastic Long Refill, 30-parts finger dressing	
Elastic plasters, conforming to the movements of the skin and therefore very comfortable to wear. The plasters allow the skin to breathe.	9.733 808
- Solves most accidents quickly, easily and hygienically	5
	QuidiFix
	1.1°=1#1
	1-1-1-1-
Description PK Cat. No.	
QuickFix plaster dispenser including two water-resistant plaster refills 1 9.733 808 4 QuickFix water resistant plaster refill containing 45 plasters 1 9.733 809	
QuickFix 30-parts finger dressing 1 9.733 825 5	9.733 825
6 First Aid Box Office	6
White with screen-printed lettering. Small first aid box made from high grade plastic with hinges and lid locking clip.	
With insert tray for easier visibility of contents. With wall bracket. Contents according to DIN 13157.	Verbandkasten
	S mummun Sca
Type Width Depth Height PK Cat. No.	Whee
mm mm Office 260 80 160 1 9.264 172	
E & OE.	241

GENERAL CATALOGUE EDITION 20



2. Occupational safety, Security

First-aid/Dressings/plasters



6.286 491

First Aid Case EUROPA	NEW
The cases are labelled in the following languages: - German - English - Portuguese - Spanish - French - Dutch - Italian - Czech - Polish - Hungarian - Slovenian - Finnish - Danish - Slovak. The instructions and lists of contents are also available in all the languages listed above. ABS thermoplastic, orange, wall bracket with 90° lock for horizontal positioning	Söhngen
EUROPA I - Contents: accordance with German standard DIN 13157 - Dimensions: 310 x 210 x 130 mm	
EUROPA II - Contents: accordance with German standard DIN 13169	

- Dimensions: 400 x 300 x 130 mm

Туре	PK Cat. No.
EUROPA I	1 6.286 491 1
EUROPA II	1 6.286 492



First Aid Boxes QUICK-CD/MT-CD

Orange. ABS-plastic, high-impact, resistant to deformation, heat resistant. With two large storage trays, rubber seal, rounded corners and edges. Sealing tag provided. Smooth-running turn-lock fasteners and stable handle. Wall bracket with 90° locking device to support box lid when opened, providing a tray platform. Tray partitions have spacers and transparent covers. With screen-printed sign and text in German. (Refill pack: 6.090 292 for QUICK-CD standard, Refill pack: 6.239 242 for MT-CD).

Туре	DIN	Width	Depth	Height	PK Cat. No.
		mm	mm	mm	
QUICK-CD filled	13157	260	110	170	1 9.264 160 2
MT-CD filled	13169	400	150	300	1 9.264 164



3

4

First Aid Kit Special for Laboratories and Chemistry

ABS plastic. Orange. Basic contents to DIN 13157. Additionally includes industrial risk equipment for laboratories and chemistry, medical, technical and chemical research institutes and laboratories. With wall bracket, handle and turn-lock fasteners. Sealing tag provided. With screen-printed label with text in German.

Dimensions (W x H x D):	400 x 300 x 150 mm		
Туре		PK Ca	t. No.
Laboratory and Chemistry		1 9.264	4 163



First Aid Cabinet Heidelberg

Contents to DIN 13157. Steel plate 0.7 mm thick. White electrostatic powder coated. Single door with profile seal and safety lock with two keys. One-piece frame with rounded corners and edges. Additional support tableau for the hygienic storage of dressings for first aid service. Open interior, with single shelf adjustable for height and separate compartments. Screen-printed label in German.

Vidth De	epth	Height	РК	
	mm	mm		
	140	362	1	9.



5 First Aid Cabinet Rom

Contents to DIN 13169. Sheet steel 0.7 mm thick. White electrostatic powder coated. With lockable double doors and two keys. The doors have profile seals made of synthetic coated wire mesh. One-piece frame with rounded corners and edges. Open interior, with two shelves adjustable for height intervals and two separate drawers. Each door with three compartments. Additional support table for the hygienic storage of dressings for first aid service. With screen-printed sign and text in German.

idth Depth
m

www.haeberle-lab.de